

NOTICE

Note that when converting this document from its original format to a .pdf file, some minor font and format changes may occur. When viewing and printing this document, we cannot guarantee that your specific PC or printer will support all of the fonts or graphics. Therefore, when you view the document, fonts may be substituted and your individual printer may not have the capability to print the document correctly.

UNIVERGE[®] SV8100

SIP Trunking Service Configuration Guide for Broadvox Fusion

NEC Corporation of America reserves the right to change the specifications, functions, or features at any time without notice.

NEC Corporation of America has prepared this document for use by its employees and customers. The information contained herein is the property of NEC Corporation of America and shall not be reproduced without prior written approval of NEC Corporation of America.

UNIVERGE is a registered trademark of NEC Corporation. All other brand names and product names referenced in this document are trademarks or registered trademarks of their respective companies.

Copyright 2011

**NEC Corporation of America
6535 N. State Highway 161
Irving, TX 75039-2402**

Communications Technology Group

TABLE OF CONTENTS

Section 1	NEC SV8100 and Broadvox Fusion Setup Guide	1-1
1.1	This Guide and Related Documents	1-1
1.2	Broadvox Fusion Account	1-1
1.3	SV8100 System Software	1-1
1.4	Requirements	1-2
1.5	Limitations	1-2
Section 2	NEC PBX Configuration	1-3
2.1	Prerequisites	1-3
2.1.1	SIP Trunking Information from Broadvox Fusion	1-3
2.1.2	NEC UNIVERGE SV8100	1-3
2.1.3	Installation Worksheet	1-3
Section 3	SV8100 Programming	1-5
3.1	Trunk Type / Slot Configuration	1-5
3.2	CD-CP00 Network Setup	1-8
3.3	IPLA DSP Basic Setup	1-9
3.4	SIP System Information Setup	1-12
3.5	SIP Server Information Setup	1-13
3.6	SIP Authentication Information Setup	1-15
3.7	SIP Trunk Registration	1-16
3.8	Calling Party Information	1-16
3.9	Class of Service Options (Outgoing Call Service)	1-17
3.10	IP Trunk Calling Party Number Setup	1-18
3.11	IP Trunk (SIP) Calling Party Number Setup for Extensions	1-19

3.12	DID (TN to ext map)	1-20
3.13	DTMF Configuration	1-21
3.14	ToS Setup	1-22
3.15	SIP Trunk Basic Setup	1-23
Section 4	Initial Testing and Troubleshooting.....	1-24

LIST OF FIGURES AND TABLES

Table 1	Installation Worksheet	4
Figure 1	Blade Configuration	5
Figure 2	IPLA Configuration	6
Figure 3	IPLA DSP Resource Selection	6
Figure 4	IP Trunk Availability	7
Figure 5	CD-CP00 Network Setup	8
Figure 6	IPLA DSP Basic Setup	9
Table 2	Port Table	10
Table 3	Router Forwarding (Gateway Table)	11
Figure 7	SIP System Information Setup	12
Figure 8	SIP Server Information Setup	13
Figure 9	SIP Authentication Information Setup	15
Figure 10	SIP Trunk Registration Information	16
Figure 11	Class of Service Options	17
Figure 12	IP Trunk (H.323/SIP) Calling Party Number Setup for Trunks	18
Figure 13	IP Trunk (SIP) Calling Party Number Setup for Extensions	19
Figure 14	Incoming Call Trunk Setup	20
Figure 15	DTMF Configuration Setup	21
Figure 16	ToS Setup	22
Figure 17	SIP Trunk Basic Setup	23
Table 4	Troubleshooting Guide	25

THIS PAGE INTENTIONALLY LEFT BLANK

Configuring NEC SV8100 with Broadvox Fusion SIP Trunking Service

SECTION 1 NEC SV8100 AND BROADVOX FUSION SETUP GUIDE

1.1 This Guide and Related Documents

This guide was created to assist knowledgeable vendors with configuring the NEC SV8100 Communication Server with Broadvox Fusion's SIP Trunking service. It provides sample entries for the required fields. The actual data is provided by Broadvox Fusion when service is activated. Questions about software and hardware installation or other PBX configuration issues should be directed to NEC's National Technical Assistance Center (NTAC).

For complete details on using SIP trunks with the SV8100, refer to the SV8100 Networking Manual.

For complete details on using DID features, refer to the DID feature in the SV8100 Features and Specifications Manual.

For details about related hardware, refer to the SV8100 System Hardware Manual.

These manuals can be downloaded from NEC's National Technical Assistance Center (NTAC) web site. You must have a valid dealer ID to access the documents.

1.2 Broadvox Fusion Account

Contact your Broadvox Fusion representative.

1.3 SV8100 System Software

The SV8100 requires system software 3.00 or higher to use Broadvox Fusion's service.

1.4 Requirements

A minimum of four IP (SIP) trunks are required due to the NEC Communications Server infrastructure setup.

The system software for the NEC Communications Server should be version 3.00 or higher.

NEC recommends that the requirements and programming are completed with as much information as possible before scheduling an activation appointment with Broadvox Fusion.

1.5 Limitations

The following limitations apply:

- Some private IP network ranges conflict with SIP Trunking Service providers. This can cause issues when connecting to the SIP Trunking service. Private ranges reserved for the customer's LAN are:

10.x.x.x

192.168.0.x through 192.168.10.x

SECTION 2 **NEC PBX CONFIGURATION**

This section provides information to NEC's solution providers and NEC Associates for configuring an NEC UNIVERGE SV8100 to connect to a Broadvox Fusion SIP Trunk service provider, utilizing a **DYNAMIC (Registration Mode)** or **STATIC (Non-Registration Mode)** configuration.

2.1 **Prerequisites**

Before you configure the UNIVERGE SV8100, you must have the following information available.

2.1.1 SIP Trunking Information from Broadvox Fusion

- Primary SIP Proxy Server IP Address
- Number Plan, if applicable for the Point-to-Point Connection
- Trunking DID(s)
The DID(s) are forwarded to the Public WAN IP address(s), DNS or DNS SRV records of the PBX.

2.1.2 NEC UNIVERGE SV8100

- SV8100 CPU firmware version 3.00 or higher
- IPLA-R UNIT (PZ-32, PZ-64, or PZ-128)
- SIP Trunking License (minimum of four licenses)
- Digital, IP and TDM Telephones

2.1.3 Installation Worksheet

Use the worksheet to record the information needed for setting up the SIP Trunking service.

Table 1 Installation Worksheet

WAN Side:	
Internet Access Type and Speed:	
WAN IP Address:	
WAN Subnet Mask:	
WAN Gateway IP Address:	

LAN Side:	
LAN IP Address for SIParator or EdgeMarc:	
LAN Subnet Mask:	
LAN IP Address for SV8100:	
VLAN ID:	

PBX Information:	
Model:	
Firmware Version:	
Number of SIP Trunk Licenses:	
Add-on Software Applications:	
Number of Users:	
Number of Concurrent Calls:	

Notes:

SECTION 3 SV8100 PROGRAMMING

When using Broadvox Fusion as your SIP trunking service provider, the following programs must be changed for SIP trunking service.

When using PCPro or WebPro for programming, enabling an option may be a checkbox option rather than entering a '1' as in terminal programming.

3.1 Trunk Type / Slot Configuration



Figure 1 Blade Configuration

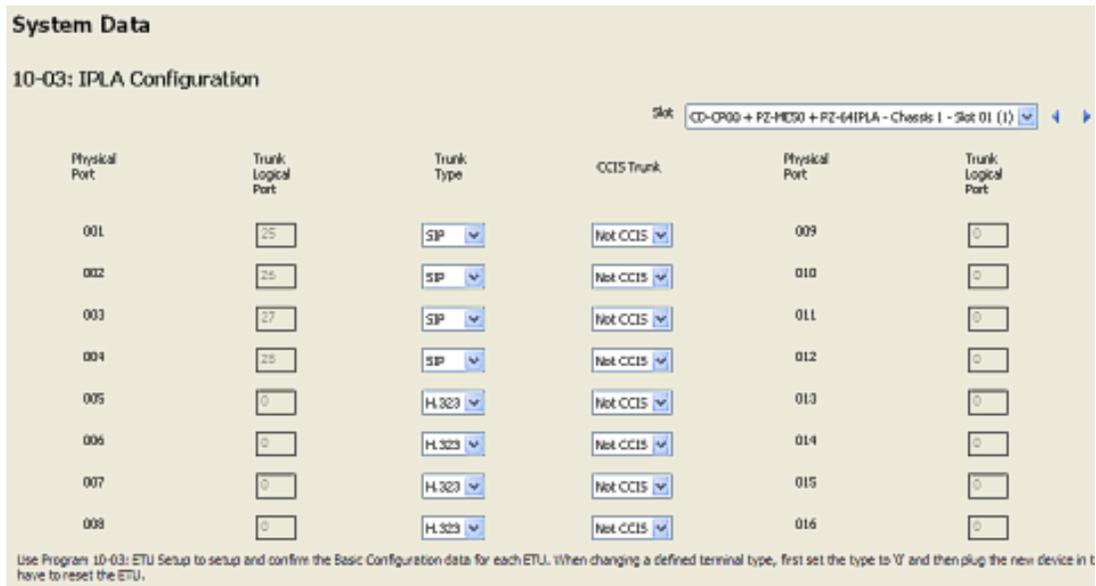


Figure 2 IPLA Configuration

10-03-02: Blade Setup, for IPLA (VoIPDB)

Define the trunks to be used for SIP trunks as 1 (SIP).

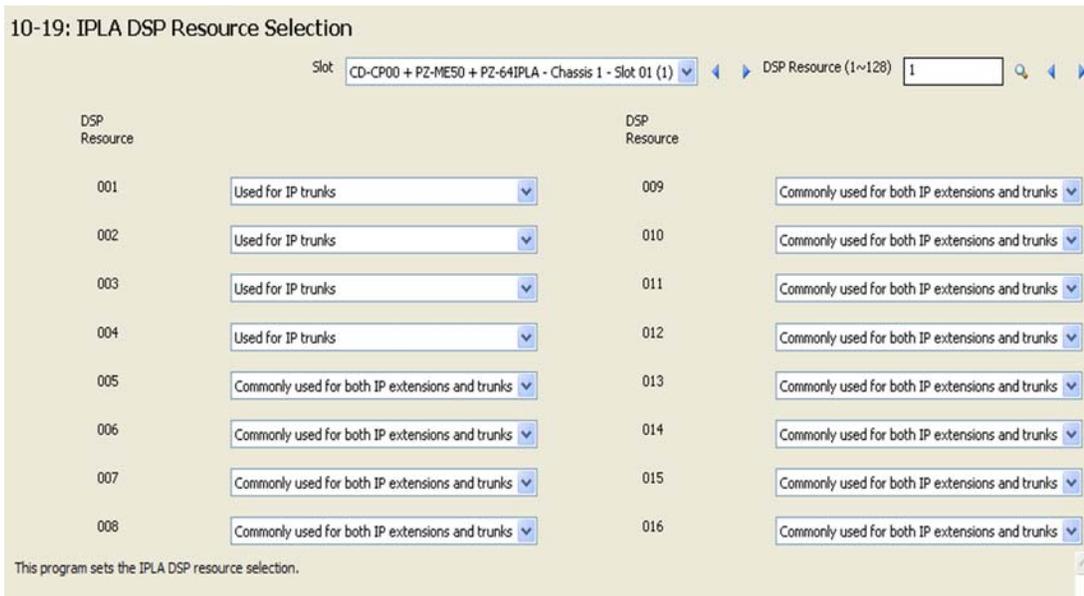


Figure 3 IPLA DSP Resource Selection

10-19-01 : VOIP DSP Resource Selection

Specify the operating mode for the DSP resources (0=common use (extensions and trunks), 1=IP extensions only, 2=SIP trunks only, 3=CCIS, 4=NetLink, 5=Blocked, 6=Unicast, 7=Multicast, 8=Paging).

The screenshot shows a configuration window titled "System Data" with a toolbar containing "Grid View", "Apply", "Cancel", and "Default" buttons. The main title is "10-40: IP Trunk Availability". A "Slot" dropdown menu is set to "CD-CP00 + PZ-ME50 + PZ-64IPLA - Chassis 1 - Slot 01 (1)".

Configuration options include:

- 01 - IP Trunk Availability:
- 02 - IP Trunk Port Count: 4 ports
- 04 - CCISoIP Port Count: None

A note at the bottom states: "This program sets the availability of SIP Trunks. A reset of the IPLA is required for changes to take effect."

Figure 4 IP Trunk Availability

10-40-01 : IP Trunk Availability – IP Trunk Availability

Turn this option "on".

10-40-02 : IP Trunk Availability – IP Trunk Port Count

Select the number of trunks being used.

3.2 CD-CP00 Network Setup

Values shown are for example purposes only. Your actual IP values will be determined by your local LAN administrator.

System Data

Grid View Apply Cancel Default

10-12: CD-CP00 Network Setup

01 - IP Address

02 - Subnet Mask

03 - Default Gateway

04 - Time Zone

05 - NIC Setting

06 - NAPT Router

07 - NAPT Router IP Address

08 - ICMP Redirect

09 - IPLA IP Address

10 - IPLA Subnet Mask

11 - IPLA NIC Setting

Use Program 10-12: CPUIII Network Setup to setup the IP Address, Subnet-Mask and Default Gateway addresses.

Caution: If any of the IP Address or NIC settings are changed, the system must be reset in order for the changes to take affect.

Figure 5 CD-CP00 Network Setup

10-12-01 : CD-CP00 Network Setup – IP Address

Set the LAN IP address for the system ethernet port to 0.0.0.0

10-12-02 : CD-CP00 Network Setup – Subnet Mask

Set the subnet mask for the system ethernet port to be different than the subnet for the IPLA blade.

10-12-03 : CD-CP00 Network Setup – Default Gateway

Set the default gateway for the IPLA blade.

If a router or firewall is placed between the SIP Trunk Provider and SV8100, you must also set the following programs:

10-12-06 : CD-CP00 Network Setup – NAPT Router

Turn this program on if the SV8100 resides behind a NAT router.

10-12-07 : CD-CP00 Network Setup – NAPT Router IP Address

Set the WAN IP address of the NAT router.

10-12-09 : CD-CP00 Network Setup – IP Address

Select the IP address for the VoIP connection (default: 172.16.0.10). A static IP address is required.

 *IP address is required by the CD-CP00. Some private IP network ranges (ex: 192.168.0.0/16, 172.16.0.0/12) conflict with SIP Service Provider's Network ranges which may cause issues when connecting SIP connect service. Private ranges reserved for the customer's LAN are 10.x.x.x and 192.168.0.x through 192.168.10.x.*

 *The SV8100 must be reset in order for the change to take effect.*

10-12-10 : CD-CP00 Network Setup – Subnet Mask

Select the Subnet Mask to be used by the VoIP server (default: 255.255.0.0).

3.3 IPLA DSP Basic Setup

Values shown are for example purposes only. Your actual IP values will be determined by your local LAN administrator.

System Data Grid View Apply Cancel Default

84-26: IPLA DSP Basic Setup Slot: CD-CP00 + PZ-ME50 + PZ-64IPLA - Chassis 1 - Slot 01 (1)

VoIP Gateway	IP Address	RTP Port	RTCP Port
1	<input type="text" value="10.10.3.20"/>	<input type="text" value="10020"/>	<input type="text" value="10021"/>
2	<input type="text" value="10.10.3.21"/>	<input type="text" value="10052"/>	<input type="text" value="10053"/>
3	<input type="text" value="10.10.3.22"/>	<input type="text" value="10084"/>	<input type="text" value="10085"/>
4	<input type="text" value="10.10.3.23"/>	<input type="text" value="10116"/>	<input type="text" value="10117"/>
5	<input type="text" value="0.0.0.0"/>	<input type="text" value="10148"/>	<input type="text" value="10149"/>
6	<input type="text" value="0.0.0.0"/>	<input type="text" value="10180"/>	<input type="text" value="10181"/>
7	<input type="text" value="0.0.0.0"/>	<input type="text" value="10212"/>	<input type="text" value="10213"/>
8	<input type="text" value="0.0.0.0"/>	<input type="text" value="10244"/>	<input type="text" value="10245"/>

Figure 6 IPLA DSP Basic Setup

Port Forwarding:

The Router will require port forwarding rules to be configured.

Port 5060 must be forwarded to the address entered in Program 10-12-09.

Port 5060 is not used for remote terminals - ports 5070 and 5080 are used instead. Port 5060 is only used for trunking so there are no issues with the possible fraudulent usage of unauthorized remote attempts to register remote terminals.

The ports used in Programs 84-26-02 and 84-26-03 must be forwarded to the IP address entered in Program 84-26-01.

The RTP/RTCP ports are forwarded to avoid possible one-way conversation which might occur on inbound calls. When forwarding the ports, the range for each gateway must be set. The number of gateways to forward will depend on the size of the IPLA.

- Gateway 1 will require ports 10020-10051 forwarded.
- Gateway 2 will require ports 10052-10083 forwarded.
- Gateway 3 will require ports 10084-10115 forwarded.
- Gateway 4 will require ports 10116-10147 forwarded.
- Gateway 5 will require ports 10148-10179 forwarded.
- Gateway 6 will require ports 10180-10211 forwarded.
- Gateway 7 will require ports 10212-10243 forwarded.
- Gateway 8 will require ports 10244-10275 forwarded.

Table 2 Port Table

Ports	UDP	TCP
5060	Yes	No
10020	Yes	No
10021	Yes	No
10052	Yes	No
10053	Yes	No
10084	Yes	No
10085	Yes	No
10116	Yes	No
10117	Yes	No

Table 3 Router Forwarding (Gateway Table)

IPLA Size	Gateway	IP Address	RTP Port	RTCP Port	UDP
	1				
IPLA32	2				
	3				
IPLA64	4				
	5				
	6				
	7				
IPLA128	8				

Example: Router Configuration shown from the NEC InRouter/4300T Router :

```
udp;143.101.120.218/255.255.255.0-10020>10.10.3.20-10020
```

```
udp;143.101.120.218/255.255.255.0-10021>10.10.3.20-10021
```

```
udp;143.101.120.218/255.255.255.0-10052>10.10.3.21-10052
```

```
udp;143.101.120.218/255.255.255.0-10053>10.10.3.21-10053
```

```
udp;143.101.120.218/255.255.255.0-10084>10.10.3.22-10084
```

```
udp;143.101.120.218/255.255.255.0-10085>10.10.3.22-10085
```

```
udp;143.101.120.218/255.255.255.0-10116>10.10.3.23-10116
```

```
udp;143.101.120.218/255.255.255.0-10117>10.10.3.23-10117
```

```
udp;143.101.120.218/255.255.255.0-5060>10.10.3.10-5060
```

3.4 SIP System Information Setup

Values shown are for example purposes only. Your actual values will be determined by your implementation team.

System Data

10-28: SIP System Information Setup

01 - Domain Name

02 - Host Name

03 - Transport Protocol

04 - User ID

05 - Domain Assignment

06 - IP Trunk Port Binding

This program sets basic system information used in SIP Trunk

Figure 7 SIP System Information Setup

10-28-01 : SIP System Information Setup – Domain Name

Define the Domain name up to 64 characters. This information is specific to your market and is provided by your SIP Trunking Service Provider.

When configuring Domain name the SIP service provide will supply the Proxy/Domain in the following manner - "Host Name" . "Domain Name" . The characters are normally separated by "." The characters after "." will be in the Domain Name.

10-28-02 : SIP System Information Setup – Host Name

Define the Host name, up to 48 characters.

When configuring Host name the SIP service provide will supply the Proxy/Domain in the following manner - "Host Name" . "Domain Name" . The characters are normally separated by "." The characters before "." will be in the Domain Name.

10-28-03 : SIP System Information Setup – Transport Protocol

Define the Transport type. This option is always set to 0 (UDP).

10-28-04 : SIP System Information Setup – User ID

This information is provided by your SIP Trunking Service Provider.

Entries: 32 characters maximum (Default=No Entry). It is typically the 10-digit billing telephone number.

If Program 10-23-04 is set for system interconnection, this entry must be numeric as 10-23-04 does not allow text entry - only numeric.

10-28-05 : SIP System Information Setup – Domain Assignment

Determine the type of Domain Assignment. Set this entry to 1 (Domain name).

10-28-06 : SIP System Information Setup – IP Trunk Port Binding

Set this entry to 0 (Disable) to allow an incoming call to use the lowest port.

3.5 SIP Server Information Setup

Values shown are for example purposes only. Your actual values will be determined by your implementation team.

System Data Grid View Apply Cancel

10-29: SIP Server Information Setup

01 - Outbound Default Proxy

02 - Inbound Default Proxy

03 - Default Proxy IP Address

04 - Default Proxy Port

05 - Register Mode

06 - Registrar IP Address

07 - Registrar Port

08 - DNS Mode

09 - DNS IP Address

10 - DNS Port

11 - Registrar Domain Name

12 - Proxy Domain Name

13 - Proxy Host Name

14 - SIP Carrier Choice

15 - Registration Expiry Time

16 - Register Sub Mode

17 - DNS Source Port

This program sets the information of SIP Server this system uses

Figure 8 SIP Server Information Setup

10-29-01 : SIP Server Information Setup – Outbound Default Proxy

Enable (1) the SIP Outbound Proxy.

If entries are made in Program 10-29-xx for a SIP Server and the SIP Server is then removed or not used, the entries in Program 10-29-xx must be set back to their default settings. Even if 10-29-01 is set to .0. (off), the SV8100 will check the settings in the remaining 10-29 programs.

10-29-03 : SIP Server Information Setup – Default Proxy IP Address

Define the SIP Trunk Service Provider Proxy IP Address. You may resolve the IP address of the Outbound Proxy by pinging the URL.

10-29-05 : SIP Server Information Setup – Registrar Mode

Set the Registrar Mode to 1(manual) with SIP trunking.

10-29-06 : SIP Server Information Setup – Registrar IP Address

Input the IP address of the SIP registrar (if given).

10-29-08 : SIP Server Information Setup – SIP Proxy Setup – DNS Mode

Set the DNS Mode to 1, when the SIP carrier provides a domain name.

10-29-09 : SIP Server Information Setup – SIP Proxy Setup – DNS IP Address

This information should be provided by your SIP service provider.

 *The DNS IP Address should be any valid Domain Name Server either SIP provided or within your network.*

10-29-11 : SIP Server Information Setup – SIP Proxy Setup – Registrar Domain Name

Define the Registrar Domain Name. This information should be provided by your SIP service provider (128 characters maximum).

10-29-12 : SIP Server Information Setup – Proxy Domain Name

Enter the Domain name.

 *When configuring the Domain name, the SIP service provider will supply the Proxy/Domain in the following manner - "Host Name" . "Domain Name" . The characters are normally separated by "." The characters **after** "." will be in the Domain Name.*

10-29-13 : SIP Server Information Setup – Proxy Host Name

Enter the Host name.

 *When configuring Domain name the SIP service provide will supply the Proxy/Domain in the following manner - "Host Name" . "Domain Name" . The characters are normally separated by "." The characters **before** "." will be in the Host Name.*

10-29-14 : SIP Server Information Setup – SIP Carrier Choice

Set the SIP Carrier Choice to 2 (Carrier B).

 *Changing this program automatically changes program 10-29-16 to "on". **10-29-16 must be turned off in order for incoming calls to route correctly.***

10-29-15 : SIP Server Information Setup – Registration Expiry Time

It is **important** to leave this automatic re-registration time to be 3600 seconds so that the Broadvox Fusion network does not get flooded.

10-29-16 : SIP Server Information Setup – Register Sub Mode

Unchecking the Register Sub Mode (setting it to "off") will allow all trunk calls to be routed based on routing policies.

3.6 SIP Authentication Information Setup

Values shown are for example purposes only. Your actual values will be determined by your implementation team.

System Data

10-30: SIP Authentication Information Setup

02 - User Name

03 - Password

04 - Authentication Trial Count

This program sets Authentication information used in SIP Trunk.

Figure 9 SIP Authentication Information Setup

10-30-02 : SIP Authentication Information Setup – User Name

Define the authentication User Name provided by Broadvox Fusion. This information is provided by your SIP Service Provider.

Entries: 48 characters maximum.

✎ NEC recommends using "nec8100" if this information is not supplied by your service provider.

10-30-03 : SIP Authentication Information Setup – Password

Enter the Broadvox Fusion authentication password. This information is provided by your SIP Service Provider.

Entries: 48 characters maximum.

3.7 SIP Trunk Registration

Values shown are for example purposes only. Your actual values will be determined by your implementation team.

System Data

10-36: SIP Trunk Registration Information

Registration ID (1~31)

Registration ID	Registration	User ID	Authentication User ID	Authentication Password
01	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
02	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
03	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
04	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
05	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
06	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
07	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
08	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Figure 10 SIP Trunk Registration Information

3.8 Calling Party Information

Caller ID - In the Invite message there are two fields that can have caller ID. One field is the “SIP From Address” and the other field is “SIP Display Info”. If both of these fields are left blank the call will not complete.

Below is an example of a SIP Invite Message with outbound CID.

```
From "2142622000"<sip:test@172.16.0.100>
```

14-12-01 : SIP Register ID Setup for IP Trunks

On a per trunk basis, you can choose a SIP register ID of 0~31. If left to 0, the “SIP from Address” would not be assigned on a per trunk basis. If set to 1~31, it then looks at command 10-36-02 to populate the “SIP from Address” field.

14-12-02 : SIP Register ID Setup for IP Trunks

This is for SIP trunks to the provider for inbound purposes. If 10-28-06 (Trunk port Binding) is enabled, inbound calls map to the trunk. If you want to create a hunt group when trunk port binding is enabled, set multiple trunks to the same pilot and then define that number in 10-36.

10-36-02 : SIP Trunk Registration Information

Per registration ID 1~31 you can assign what will be populated in the “SIP from Address” field.

15-16-01 : SIP Register ID Setup for Extensions

Per station you can choose a SIP register ID of 1~31. If left blank the “SIP from Address” would not be assigned on a per station basis. If assigned, it will look at Program 10-36-02 to populate the “SIP from Address” field. This takes priority over command 14-12-01.

10-28-04 : SIP System Information Setup – User ID

This is the default “Display Info” and “From Address” if either of these fields is blank what is assigned in this command will be inserted. This setting has the lowest priority and if any of the next commands are set they will be sent out instead of this command.

3.9 Class of Service Options (Outgoing Call Service)

Values shown are for example purposes only. Your actual values will be determined by your implementation team.

System Data

20-08: Class of Service Options (Outgoing Call Service)

Class of Service (1~15)

01 - Intercom Call	<input checked="" type="checkbox"/>
02 - Outgoing Trunks	<input checked="" type="checkbox"/>
03 - Common Speed Dials	<input checked="" type="checkbox"/>
04 - Group Speed Dials	<input checked="" type="checkbox"/>
05 - Dial Number Preview	<input checked="" type="checkbox"/>
06 - Toll Restriction Override	<input type="checkbox"/>
07 - Repeat Redial	<input checked="" type="checkbox"/>
08 - Toll Restriction Dial Blocking	<input type="checkbox"/>
09 - Hotline for Handpiece	<input type="checkbox"/>
10 - Handsfree Answerback/Forced Intercom Ringing Switching	<input checked="" type="checkbox"/>
11 - Call Mode Switching Protection from Caller (Internal Call)	<input type="checkbox"/>
12 - Department Group Step Calling	<input checked="" type="checkbox"/>
13 - ISDN Clip	<input type="checkbox"/>
14 - Set Calling Sub Address	<input type="checkbox"/>
15 - Block Outgoing Caller ID	<input type="checkbox"/>
16 - E911 Dialed Extension Name and Number Display	<input type="checkbox"/>
17 - ARS Override of Trunk Access Map	<input type="checkbox"/>
19 - Hotline for Speaker	<input type="checkbox"/>
20 - Hot Key Pad	<input type="checkbox"/>
21 - Automatic Trunk Seizing by Pressing SPK Key	<input type="checkbox"/>

Use Program 20-08: Class of Service Options (Outgoing Call Service) to define the outgoing call feature availability for each extension's Class of Service (Cos).

Figure 11 Class of Service Options

20-08-13 : Class of Service Options (Outgoing Call Service) – ISDN Clip

This needs to be turned ON per COS, if you are trying to send any information on a per station basis. If turned OFF, it will still send the trunk information if set.

20-09-02: Class of Service Options (Incoming Call Service) Caller ID Display

This needs to be turned ON per COS, if you want to receive caller ID.

3.10 IP Trunk Calling Party Number Setup

The screenshot shows a configuration window titled "System Data" with the subtitle "21-17: IP Trunk (H.323/SIP) Calling Party Number Setup for Trunks". The window includes a "Trunk" dropdown menu set to "001: SIP - Chassis 1 - Slot 01 (1)". Below this, there is a table with four rows, each representing a trunk (01, 02, 03, 04). Each row has a "Calling Party Number" input field. The first field contains "<Customer TN>", while the others are empty. At the bottom, a note states: "Use Program 21-17: IP (H.323/SIP) Trunk Calling Party Number Setup for Trunks to allow for the Calling Party Number to be displayed for IP trunks when the VoIP feature is used." The top right corner of the window has buttons for "Grid View", "Apply", "Cancel", and "Default".

Trunk	Calling Party Number
01	<Customer TN>
02	
03	
04	

Use Program 21-17: IP (H.323/SIP) Trunk Calling Party Number Setup for Trunks to allow for the Calling Party Number to be displayed for IP trunks when the VoIP feature is used.

Figure 12 IP Trunk (H.323/SIP) Calling Party Number Setup for Trunks

21-17-01: Calling Party Number Setup for Trunks

On a per trunk basis this populates the "SIP Display Info" field. If a station has a setting in 21-19-01, it will override this field.

3.11 IP Trunk (SIP) Calling Party Number Setup for Extensions

Values shown are for example purposes only. Your actual values will be determined by your implementation team.

ICM Extension	Calling Party Number	ICM Extension	Calling Party Number
117	<Customer TN>	206	
118		207	
119		208	
201		209	
202		210	
203		211	
204		212	
205		213	

Use Program 21-19: IP (SIP) Trunk Calling Party Number Setup for Extensions to allow for the Calling Party Number to be displayed for IP extensions when the VoIP feature is used.

Figure 13 IP Trunk (SIP) Calling Party Number Setup for Extensions

21-19-01 : IP Trunk (SIP) Calling Party Number Setup for Extensions

On a per station basis this populates the “SIP Display Info” field. This setting has the highest priority.

This program is used to assign the Calling Party Number for each extension (Entries: 1~0, *, #). The assigned number is sent to the SIP Trunking Service Provider when the caller places an outgoing call. If the Calling Party Number is assigned by both Program 21-17 and 21-18/21-19, then the system uses the data in Program 21-18/21-19. Do not use Program 21-13 for SIP. This entry must be a 10-digit DID associated with the SIP Trunking Service Provider Account. DID numbers are provided by your SIP Trunking Service Provider Coordinator.

3.12 DID (TN to ext map)

Values shown are for example purposes only. Your actual values will be determined by your implementation team.

System Data

22-02: Incoming Call Trunk Setup

Trunk: 001: SIP - Chassis 1 - Slot 01 (1) | Night Mode: 01 - Mode 1

Trunk	Mode 1	Mode 2	Mode 3	Mode 4
01	DID	DID	DID	DID
02	DID	DID	DID	DID
03	DID	DID	DID	DID
04	DID	DID	DID	DID

Use Program 22-02: Incoming Call Trunk Setup to assign the incoming trunk type for each trunk. There is one item for each Night Service Mode.


Figure 14 Incoming Call Trunk Setup

22-02-01 : Incoming Call Trunk Setup

Define the SIP trunks as type 3 (DID). In addition to the SIP trunk programming, refer to the DID feature in the SV8100 Features and Specifications Manual for additional DID programming (e.g., 14-05, 22-04, 22-09, 22-10, 22-11, 22-12, 22-13, 22-17, 34-01).

3.13 DTMF Configuration

Values shown are for example purposes only. Your actual values will be determined by your implementation team.

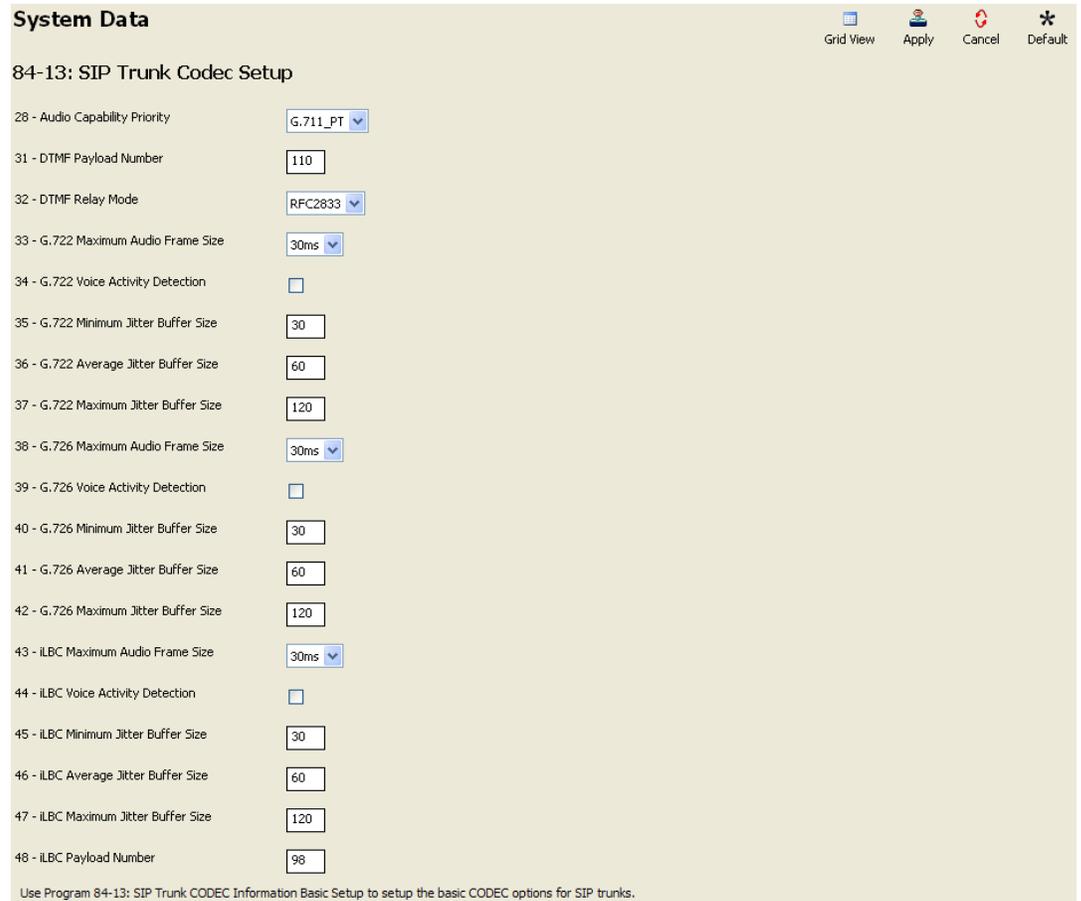

The screenshot displays the 'System Data' configuration page for '84-13: SIP Trunk Codec Setup'. The page includes a title bar with 'Grid View', 'Apply', 'Cancel', and 'Default' buttons. The configuration is organized into a table with 18 rows, each representing a different parameter. The parameters are grouped by codec type: G.711, G.722, G.726, and iLBC. The 'DTMF Relay Mode' parameter (32) is highlighted in blue, indicating it is the current focus of the configuration.

Parameter ID	Parameter Name	Value
28	Audio Capability Priority	G.711_PT
31	DTMF Payload Number	110
32	DTMF Relay Mode	RFC2833
33	G.722 Maximum Audio Frame Size	30ms
34	G.722 Voice Activity Detection	<input type="checkbox"/>
35	G.722 Minimum Jitter Buffer Size	30
36	G.722 Average Jitter Buffer Size	60
37	G.722 Maximum Jitter Buffer Size	120
38	G.726 Maximum Audio Frame Size	30ms
39	G.726 Voice Activity Detection	<input type="checkbox"/>
40	G.726 Minimum Jitter Buffer Size	30
41	G.726 Average Jitter Buffer Size	60
42	G.726 Maximum Jitter Buffer Size	120
43	iLBC Maximum Audio Frame Size	30ms
44	iLBC Voice Activity Detection	<input type="checkbox"/>
45	iLBC Minimum Jitter Buffer Size	30
46	iLBC Average Jitter Buffer Size	60
47	iLBC Maximum Jitter Buffer Size	120
48	iLBC Payload Number	98

Use Program 84-13: SIP Trunk CODEC Information Basic Setup to setup the basic CODEC options for SIP trunks.

Figure 15 DTMF Configuration Setup

84-13-32 : SIP Trunk CODEC Information Basic Setup – DTMF Relay Mode
Set the DTMF setup to 1 (RFC2833).

3.14 ToS Setup

Values shown are for example purposes only. Your actual values will be determined by your implementation team.

System Data Grid View Apply Cancel Default

84-10: ToS Setup

Protocol Type	ToS Mode	IP Precedence Priority	IP Precedence Delay	IP Precedence Throughput	IP Precedence Reliability	IP Precedence Cost	Priority (Diffserve)
DRS	Disabled	0	Normal	Normal	Normal	Normal	0
Protims	Disabled	0	Normal	Normal	Normal	Normal	0
Voice Control	Disabled	0	Normal	Normal	Normal	Normal	0
H.323	Disabled	0	Normal	Normal	Normal	Normal	0
RTP/RTCP	Diffserve	0	Normal	Normal	Normal	Normal	40
SIP	Disabled	0	Normal	Normal	Normal	Normal	0
CCIS	Disabled	0	Normal	Normal	Normal	Normal	0
DT700	Disabled	0	Normal	Normal	Normal	Normal	0
SIP Trunk	Diffserve	0	Normal	Normal	Normal	Normal	46
NetLink	Disabled	0	Normal	Normal	Normal	Normal	0

This program sets the ToS Data.

Figure 16 ToS Setup

84-10-01 : ToS Setup – ToS Mode

For the RTP/RTCP (Protocol type 5) and SIP Trunk (Protocol type 9), set the ToS Mode to “2” (Diffserv).

The SV8100 must be reset in order for the change to take effect.

84-10-07 : ToS Setup – Priority (Diffserv)

For each of the following protocol types, set the following priorities:

RTP/RTCP (Protocol type 5): **Priority 40.**

SIP Trunk (Protocol type 9): **Priority 46.**

The SV8100 must be reset in order for the change to take effect.

3.15 SIP Trunk Basic Setup

Values shown are for example purposes only. Your actual values will be determined by your implementation team.

System Data

Grid View Apply Cancel Default

84-14: SIP Trunk Basic Setup

01 - Invite ReTx Count

02 - Request ReTx Count

03 - Response ReTx Count

04 - Request ReTx Start Time

05 - Request Max ReTx Interval

06 - SIP Trunk Port

07 - Session Timer Value

08 - Minimum Session Timer Value

09 - Called Party Info

10 - URL Type

11 - URL/TO Header Information

Use Program 84-14: SIP Trunk Basic Information Setup to define the basic setup for SIP trunks.

Figure 17 SIP Trunk Basic Setup

84-14-11 : SIP Trunk Basic Setup – URL/To Header Setting Information

Set this program to SIP UA Domain.

Changes within this program require the SV8100 be reset in order for the change to take effect.

SECTION 4 INITIAL TESTING AND TROUBLESHOOTING

To confirm that the system is correctly set, perform the following tests:

 *If you run into an issue with any of these tests, refer to [Table 4 Troubleshooting Guide](#). Test an outgoing call to a local number. Check for ringback, 2-way audio and quality.*

1. Test an outgoing call to a long distance number. Check for ringback, 2-way audio and quality.
2. Test an outgoing call to an international number. Check for ringback, 2-way audio and quality.
3. Test a outgoing call lasting more than 15 minutes.
4. Test multiple call concurrences on outgoing calls. Setup multiple calls to PSTN.
5. Test an outgoing call to an Operator '0'.
6. Test an outgoing call to directory assistance '411'.
7. Test a 911 call.



Identify to the operator that this is a TEST!

8. Test an incoming call to an internal DID. Check for ringback, 2-way audio and quality.
9. Test an incoming call to an auto-attendant. Check DTMF and audio quality.
10. Test transferring calls off-site.
11. Test an outgoing call to an auto-attendant and verify DTMF.

Table 4 Troubleshooting Guide

Issue	Cause	Remedy
No Calls IN/Out	<input type="radio"/> Router Configuration	<input type="radio"/> Check Router Configuration
	<input type="radio"/> NEC Configuration	<input type="radio"/> Check NEC Configuration
	<input type="radio"/> Unqualified IP Address	<input type="radio"/> Note WAN IP Address and Contact Provider
No Calls Out	<input type="radio"/> NEC Configuration	<input type="radio"/> Check NEC Configuration
	<input type="radio"/> Unqualified IP Address	<input type="radio"/> Note WAN IP Address and Contact Provider
No Calls In	<input type="radio"/> NEC Configuration	<input type="radio"/> Check NEC Configuration
	<input type="radio"/> Unqualified IP Address	<input type="radio"/> Note WAN IP Address and Contact Provider
One-Way Audio	<input type="radio"/> NEC Configuration	<input type="radio"/> Check NEC Configuration
Echo	<input type="radio"/> Excessive Delay	<input type="radio"/> Check LAN and WAN for high latency
	<input type="radio"/> Echo Cancellation Issue	<input type="radio"/> Check Echo settings and/or consult Broadvox Fusion
Call Dropping	<input type="radio"/> Internet Access Issues	<input type="radio"/> Call Internet Access Provider
	<input type="radio"/> Extreme Latency on LAN	<input type="radio"/> Check Latency on LAN
	<input type="radio"/> SIP issue	<input type="radio"/> Contact Provider
Static or HUM on Phones	<input type="radio"/> Power issue	<input type="radio"/> Check power if using AC, should not be issue in PoE
Missing Parts of Words	<input type="radio"/> Packet Loss or Latency on LAN	<input type="radio"/> Check LAN
	<input type="radio"/> Packet Loss or Latency on WAN	<input type="radio"/> Check with Internet Access Provider
	<input type="radio"/> Jitter Buffer Configuration	<input type="radio"/> Check with NEC

-- NOTES --